



Universal corner Q Stalyo PRO Installation manual


1. Installation of the external corner.

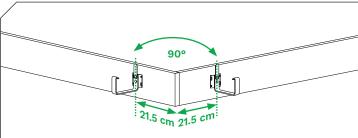


Lift the mounting plates of the brackets upright.




Make notches on the gutter drips at a distance of 35 mm from the end of the gutter that will be connected to the corner. Place the gutters in the brackets (1.5 cm from the edge of the gutter).

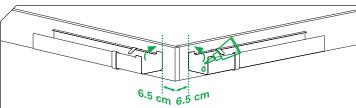

Lift the notched drips of the gutters to vertical position. Cover the area where the corner is to be placed with two lines of adhesive (1.5 cm from the gutter edge).

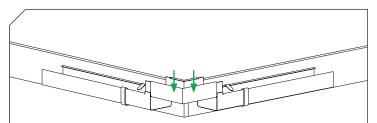



Insert the corner in the gutters previously covered with the sealing glue.

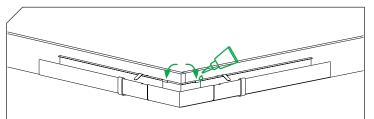


Fold the drips of the gutters on the corner. Secure the connection from the inside using sealing glue.

2. Installation of the internal corner.

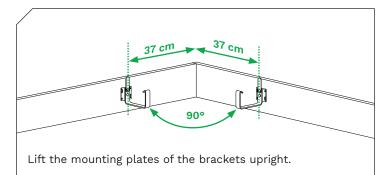


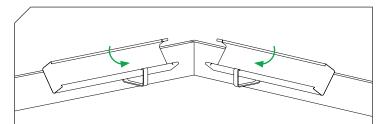


Make notches on the gutter drips at a distance of 35 mm from the end of the gutter that will be connected to the corner. Place the gutters in the brackets.

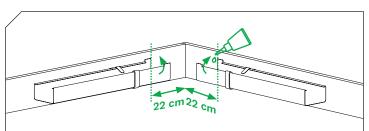

Lift the notched drips of the gutters to vertical position. Cover the area where the corner is to be placed with two lines of adhesive (1.5 cm from the gutter edge).

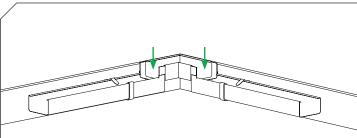

Insert the corner in the gutters previously covered with sealing glue.

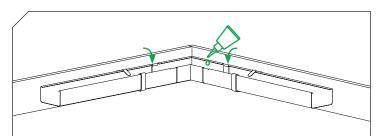

Fold the drips of the gutters on the corner. Secure the connection from the inside using sealing glue.

Q Stalyo GPM sp. z o.o. sp. k. ul. Przemysłowa 7a 32-083 Balice

www.qstalyo.com